

ALTENBURGER ELECTRONIC GMBH

77960 Seelbach, Schloßweg 5, Telefon +49 7823 509 0, Fax +49 7823 509 97

E-Mail: info@altenburger.de

Internet: <http://www.altenburger.de>

Bedienungsanleitung

EIB/KNX Phasenabschnitt-Tastdimmer ALTODIM 600-0

Typ : IBDA600-0

Best.-Nr. : 80.13.061

Anwendung und Funktion des Gerätes

Dieses Gerät ist ein EIB/KNX-Dimmer für Glühlampen und im Phasenabschnitt dimmbare elektronische Transformatoren. Über empfangene Schalt- und Dimmbefehle kann er die angeschlossene Last von Minimum bis Maximum in ihrer Helligkeit steuern.

Der Dimmer lässt sich mit EIB/KNX-Bedienelementen oder einer geeigneter Visualisierung ansteuern. Er kann aber auch direkt über den Tasteingang mit einem handelsüblicher Taster (230V~ / 1-Tast-Dimmfunktion) bedient werden. Nähere Angaben zur Parametrisierung und den Objekten siehe Applikationsbeschreibung.

Ein-/Ausschaltung

Im "AUS-Zustand" steuert der Dimmer die angeschlossene Last nahezu auf 0 zurück. Die Last wird nicht vom Netz getrennt (Funktionsausschaltung). Bei einem Einbefehl wird auf den programmierten Einschaltwert gesprungen.

Anschließbare Lasten

Mit dem Dimmer können Lasten (Glühlampen, elektronische Transformatoren) zwischen 40 und 600W/VA gesteuert werden. Es dürfen keine konventionellen Transformatoren oder induktive Lasten angeschlossen werden. Die Gesamtleistung der angeschlossenen Last darf die Maximallast des Dimmers nicht überschreiten. Hierfür ist auch die Verlustleistung der elektronischen Transformatoren, sowie deren $\cos \phi$ zu berücksichtigen. Der maximale Ausgangsstrom des Dimmers darf ebenfalls nicht überschritten werden. Das Verbinden von Ausgängen mehrerer Dimmer ist nicht zulässig.

Elektronische Transformatoren:

Die elektronischen Transformatoren dürfen nur mit der Netzseite (Primärseite) an den Dimmer angeschlossen werden. Sie müssen nach Herstellerangaben belastet und für die entsprechende Netzspannung ausgelegt sein. Ein Betrieb im Leerlauf ist nicht zulässig. Sie dürfen nur angeschlossen werden, wenn sie für den Betrieb im Phasenabschnittverfahren geeignet sind. Generell ist der Betrieb von konventionellen Transformatoren oder induktiven Lasten nicht zulässig und kann zur Zerstörung des Dimmers oder der Transformatoren führen.

Lastausgang

- elektronische Strombegrenzung (Einschalt-, Überlast-/Kurzschlussstrom)
- Abregelung bei Überschreitung der maximal zulässigen Temperatur
- Abschaltung bei unzulässig hoher Temperatur, Wiedereinschaltung nach Abkühlung (Funktionsausschaltung)


Sicherheits- und Installationshinweise

WARNUNG:

- Vor der Installation die Bedienungsanleitung vollständig lesen und zur späteren Referenz aufbewahren.
- Der Dimmer darf nur von einer Elektrofachkraft installiert und in Betrieb genommen werden.
- Verdrahtung und andere Arbeiten am Gerät und den Lasten dürfen nur im spannungsfreien Zustand durchgeführt werden. Das Gerät muss extern abgesichert werden (Sicherungsautomat, max. 6A).
- Die Verdrahtung, die Leitungslängen und die Absicherung müssen in Übereinstimmung mit den gültigen lokalen Bestimmungen, den Anschlussplänen und den Aufdrucken sein. Technische Daten beachten.
- Im "AUS-Zustand" wird **die Last nicht vom Netz getrennt** (Funktionsausschaltung/keine Trennung).
- Das Gerät darf nicht geöffnet bzw. ohne Gehäuse betrieben werden.
- Die geltenden Sicherheits- und Unfallverhütungsvorschriften sind einzuhalten.
- Die EIB/KNX-Module und die EIB/KNX-Verdrahtung müssen in Übereinstimmung mit den EIB/KNX-Bestimmungen sein.
- Für EIB/KNX dürfen nur EIB/KNX zugelassene Kabel und Komponenten verwendet werden.
- Die EIB/KNX-Verdrahtung muss getrennt von den Netzleitungen sein, ausreichende Abstände sind einzuhalten.
- Das Gerät ist für Schaltschrank-/Normverteilungsmontage und muss fest auf die DIN-Schiene aufgeschnappt werden.
- Das Gerät erzeugt Wärme und muss ausreichend belüftet sein. Es darf nur senkrecht (Anschlussklemmen nach oben) betrieben werden.
- Es dürfen nur Lasten angeschlossen und gesteuert werden, die für die Verwendung mit einem **Phasenabschrittdimmer (Phasenabschnittverfahren) zugelassen** und geeignet sind. Induktive Lasten sind nicht erlaubt. Dies kann den Dimmer, wie auch die Transformatoren, beschädigen. Die jeweiligen Herstellerangaben müssen beachtet werden.
- Das Verbinden von Ausgängen mehrerer Dimmer ist nicht zulässig.

Auslieferungszustand

Im Auslieferungszustand kann der Dimm-Aktor auch ohne EIB/KNX verwendet werden. Über den Tasteingang ist eine 1-Tastdimmfunktion möglich: kurze Betätigung Ein/Aus, lange Betätigung Heller/Dunkler. Nach dem Einschalten oder Spannungsausfall kommt der zuletzt eingestellte Wert wieder. Es werden keine EIB/KNX-Telegramme gesendet. Eine EIB/KNX-Spannungsversorgung muss jedoch angeschlossen sein.

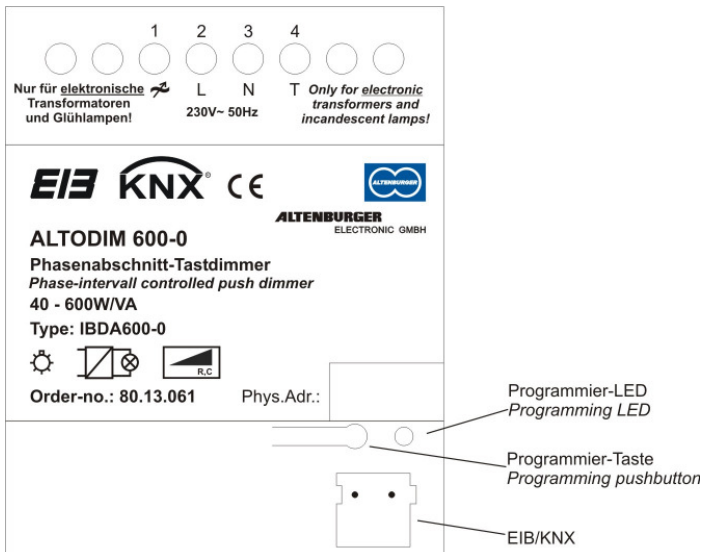

Technische Daten

Gerätebezeichnung	: ALTODIM 600-0
Typ	: IBDA600-0
Bestellnummer	: 80.13.061
Netzspannung	: 230V~ 50Hz, DC nicht erlaubt
Absicherung	: extern 6A
Betriebstemperatur	: 0°C ... +45°C, Zuluft bei senkrechter Betriebslage
Maximallast	: 600W/VA
Mindestlast	: 40W/VA
Ausgangsstrom	: max. 2,60A~
Schutzklasse	: II (Schutzisolierung)
Schutzart	: IP20
Verschmutzungsgrad	: 2 (trocken nicht leitend)
Eigenverlust	: < 2% der angeschlossenen Leistung
Geräuschentwicklung	: < 25dB(A) bei Nennlast in 1m Abstand
Tasteingang T	: Taster (Schließer nach L) max. 250V~ für Netzspannung
Lastausgang	: - elektronische Strombegrenzung (Einschalt-, Überlast-/Kurzschlussstrom) - Abregelung bei Überschreitung der maximal zulässigen Temperatur - Abschaltung bei unzulässig hoher Temperatur, Wiedereinschaltung nach Abkühlung (Funktionsausschaltung)
Anschlussklemmen	: Netzklemmen 1-4 (Schraubklemmen) 0,2mm ² - 2,5mm ² für eindrahtige Leiter 0,2mm ² - 1,5mm ² mit Aderendhülse
Leitungen	: max. 100m, mind. 1,5mm ² (Klemmen 1-4)
Montage	: Gehäuse mit Schnappbefestigung für Tragschienen (TS 35 x 7,5 - 15)
Abmessungen	: BxHxT=72x90x64mm (4TE), Normschieneneinbauforn
Gewicht	: ca. 220g
EIB/KNX	: Kontaktierung über WAGO-Stecker
Leitungen	: EIB/KNX-Kabel
Versorgung EIB/KNX	: 24VDC (+6V/-4V) EIB/KNX-Netzteil
Leistungsaufnahme KNX	: <290mW bei 29VDC
Kennzeichnung	: CE, KNX
Anschlussbelegung	: siehe Anschlusspläne bzw. Geräteaufdruck

WARNUNG:

Bei falscher Verdrahtung besteht Gefahr für Leben, Risiko von Feuer, Ausfall, Fehlfunktion oder Zerstörung.


Software

Für den Einsatz unter EIB/KNX und der Projektierung mit der EIB/KNX-Tool-Software (ETS), siehe beiliegende Applikationsbeschreibung, Altenburger EIB/KNX-Datenbank und Technisches Handbuch.


Die Technischen Daten und Angaben beziehen sich auf den Nennbetrieb und die angegebene Netzspannung.

Anschlusspläne:

ALTODIM 600-0

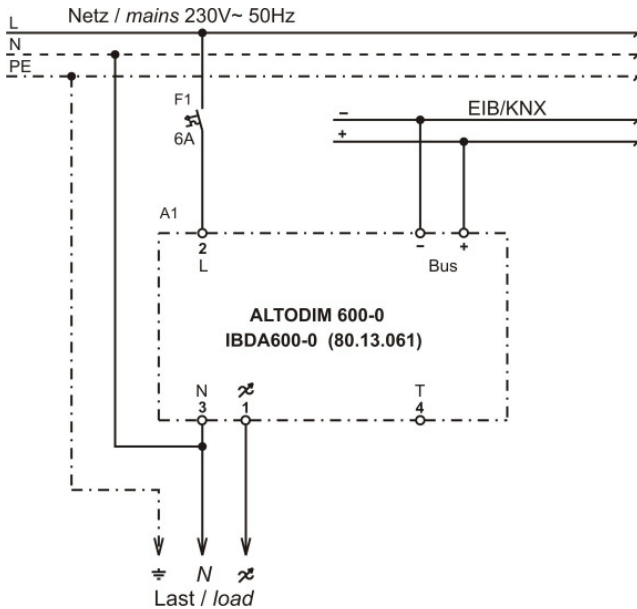

ALTODIM 600-0 mit zusätzlichem Taster

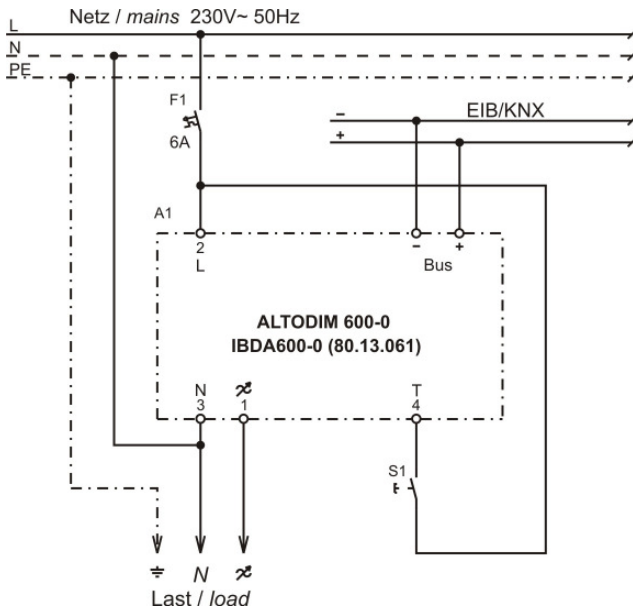

Irrtum und technische Änderungen vorbehalten.

ALTENBURGER ELECTRONIC GMBH

77960 Seelbach, Schloßweg 5, phone +49 7823 509 0, fax +49 7823 509 97

E-Mail: info@altenburger.de

Internet: <http://www.altenburger.de>

Operating instructions

EIB/KNX Phase-interval controlled push dimmer ALTODIM 600-0

Type : **IBDA600-0**

Order-no.: **80.13.061**

Applications and functions

The EIB/KNX-phase-interval (lagging edge) controlled dimmer is suitable for the control of incandescent lamps as well as low-voltage halogen lamps with electronic transformers. By receiving telegrams via the EIB/KNX-BUS-System it is suitable for the dimming the connected load between minimum and maximum brightness.

The dimmer can be controlled with EIB/KNX-pushbutton or touch panels as well as with suitable visualization. It can be controlled as well however with customary pushbutton (230V~) with the functions BRIGHTER-DARKER-ON/OFF. More details for the parametrizing and objects: see application manual.

ON / OFF-Switching

In the "OFF" position the dimmer sets the connected load near 0V. The load is not disconnected from the power supply (function off switching). With the "On" command the dimmer controls the connected load into the programmed switch-On value.

Loads

The dimmer controls loads between 60 and 600W / VA (incandescent lamps and low-voltage halogen lamps with electronic transformers). Wire-wound transformers or inductive loads may not be connected. The total load may not exceed the nominal load of the dimmer. The power dissipation of the electronic transformers as well the power factor have to be considered. The nominal current of the dimmer may not be exceeded. The connection of dimmed outlets of several dimmers is not permitted.

Electronic transformers:

The electronic transformers has to be connected only with the supply side to the dimmer (primary side). For maximum loads please refer to the supplier's manual. A no-load operation is not permitted. Electronic transformers may be connected only if they are suitable for an operation in the phase-interval (lagging edge) mode. Control of wire-wound transformers or inductive loads is not allowed. This could damage the dimmer as well as the transformers.

Load exit

- Electronic current limiting (switch-on, overload / short-circuit current)
- Voltage-drop when exceeding the max. permissible temperature
- Switch off at inadmissible temperatures, electrical reclosing after cooling down (function switching)

Safety and Installation instructions


Safety and Installation instructions

WARNING:

- Read instructions completely before installation and retain them for future reference.
- The dimmer must be installed and tested only by a qualified electrician.
- Wiring and other work at the device and the loads may be performed only in a voltage-free state.
- The device must be external fused (circuit breaker, max. 6A).
- The wiring, the wiring length and the fusing must be in accordance with the local wiring regulations and in accordance to the wiring diagrams and imprint on the device. Technical Data may be observed.
- In the OFF state **the load is not disconnected from the power supply** (function off switching/no isolation).
- The device may not be opened or set into function without housing.
- The relevant safety and accident prevention regulations and installation instructions must be observed.
- EIB/KNX-Modules and EIB/KNX-Wiring must be in accordance with the EIB/KNX-Regulations.
- Only EIB/KNX approved cable and components may be used.
- The EIB/KNX-Wiring must be separated from the main wires, adequate distances must be observed.
- The device is for mounting in a control cabinet and must be reliable snapped on the DIN-rail.
- The dimmer produces heat and must sufficiently be cooled by air convection. The dimmer may be installed only in a vertical mode (terminals on top).
- Only such loads may be connected and controlled which are suitable and **permitted** for an application with a **phase-interval controlled dimmer (lagging edge mode)**. Inductive loads are not allowed. This could damage the dimmer as well as the transformers. The manufacturer's data must be considered.
- The connection of the outlets from several dimmers is not permitted.

Delivery status

With a pushbutton inlet for mains the module is suitable for the control outside the EIB/KNX-system. With the pushbuttons the following functions can be performed: Short touch = ON/OFF, continuously pressing the button: lighting goes to BRIGHTER/DARKER. After having switched OFF and switched ON again (or after a power failure) the last set light level will be achieved again. No EIB/KNX-Telegrams are being sent. The EIB/KNX-power supply however must be connected.

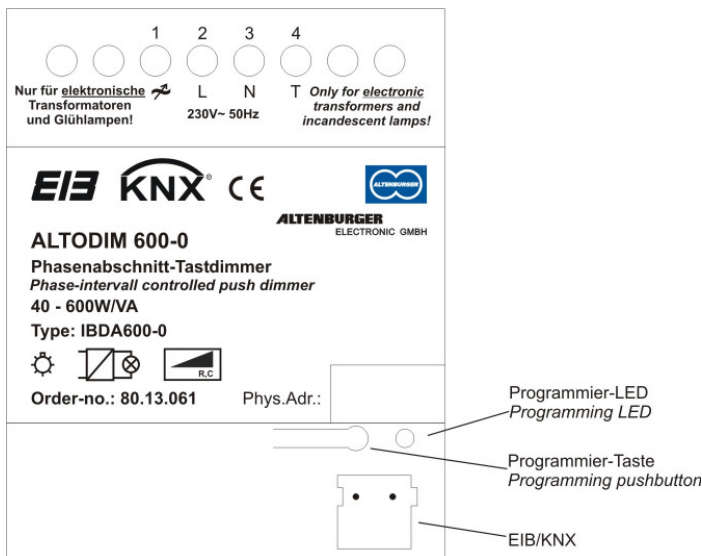

Technical Data

Designation	: ALTODIM 600-0
Type	: IBDA600-0
Order-no.	: 80.13.061
Power supply	: 230V~ 50Hz, DC not permitted
Protection	: external 6A
Operating temperature	: 0°C ... +45°C; natural air convection at vertical mounting position
Max. load capacity	: 600W/VA
Min. load capacity	: 40W/VA
Output current	: max. 2,60A~
Protection class	: II (total insulation)
Type of protection	: IP20
Contamination grade	: 2 (dry non-conducting)
Own consumption	: < 2% of the connected load
Noise level	: < 25dB(A) at nominal load in a distance of 1m
Pushbutton input T	: pushbutton (normally open contact to L) max. 250V~ pushbutton for mains
Load exit	: - electronic current limiting (switch-on, overload / short-circuit current) - voltage-drop when exceeding the max. permissible temperature - switch off at inadmissible temperatures, electrical reclosing after cooling down (function switching)
Terminals	: screw terminals no. 1-4 0,2mm ² - 2,5mm ² for solid wires 0,2mm ² - 1,5mm ² litz wires with sleeve
Wire lengths	: max. 100m, min. 1,5mm ² (terminals 1-4)
Mounting	: housing with catch spring for DIN rails
Dimensions	: WxHxD=72x90x64mm (4 divisions)
Weight	: approximately 220gr
EIB/KNX	: EIB/KNX-cable with EIB/KNX-connector
Power supply EIB/KNX	: 24VDC (+6V/-4V) EIB/KNX-power supply
Power consumption KNX	: <290mW at 29VDC
Labelling	: CE, KNX
Wiring	: according to wiring diagrams and imprint on the controls

WARNING:

If incorrectly connected there is a danger for life, risk of fire, failure, malfunction or destruction.


Software:

For use with EIB/KNX and the projecting with the EIB/KNX-Tool-Software (ETS), see enclosed application note, Altenburger EIB/KNX-Database and Technical Handbook.


The technical data refer to the nominal loads and the indicated power supply.

Wiring diagrams:

ALTODIM 600-0

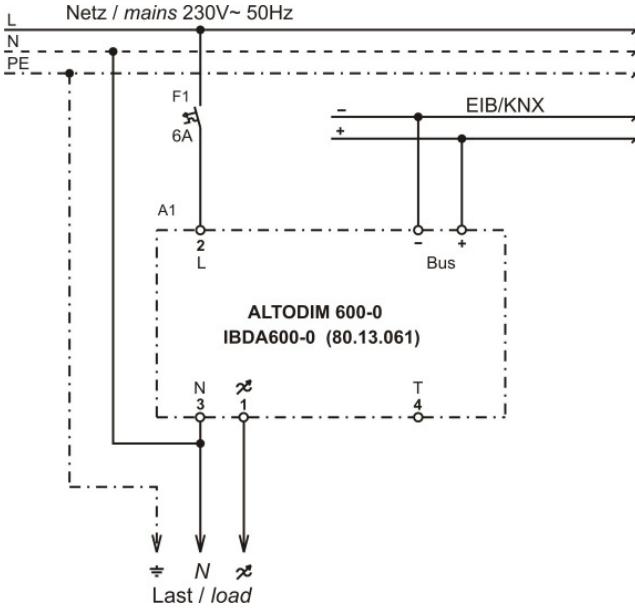

ALTODIM 600-0 with additional pushbutton

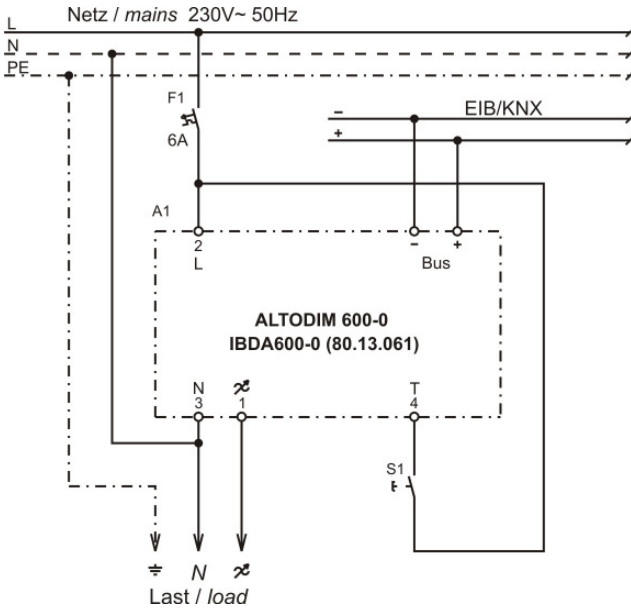

Subject to changings without note. Error and technical alterations reserved.
16.06.2010 1v2